

LED

REC LED : Green LED blinks while recording

STATUS LED :

Yellow LED blinks when an error occurs or while recording is proceeding.

POWER LED : Red LED lights when power is on.


Installation

1. Insert SD card.
2. Connect camera (VIDEO IN) and monitor (VIDEO OUT).
3. Connect microphone (AUDIO IN) and Speaker (AUDIO OUT).
4. Connect power cable (DC 12V) and supply power.

Remarks

- * Audio is mute on live mode, but it is activated on playback mode.
- * In case of displaying no image on the monitor, disconnect power cable and reconnect it.
- * Before inserting SD Card, it should be formatted in 'FAT32' on PC.
- * Sandisk Card has been tested with AKR-40T
The compatibility with other brands is not guaranteed
-up to SDHC SandDisk 8G

Menu Mode

Press 'MENU' button of the remote control in order to access OSD menu 
Enter password. Default password is '0000'.
Press 'ENT' button 4 times in a consecutive way to enter the password.

MODEL	AKR-40T
VERSION	1.x
PASSWORD	****

Language Setup

OSD MENU > SYSTEM SETUP > LANGUAGE SETUP





LANGUAGE SETUP	: English
VIDEO OUTPUT	: NTSC
BRIGHTNESS	: Normal

Select Language : English, French, Dutch, German, Spanish
* Refer to the manual for more details.

PASSWORD Change

OSD MENU > SUB MENU > PASSWORD ENABLE

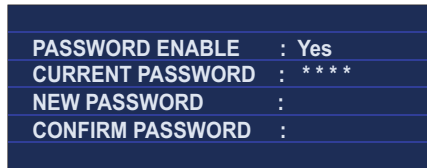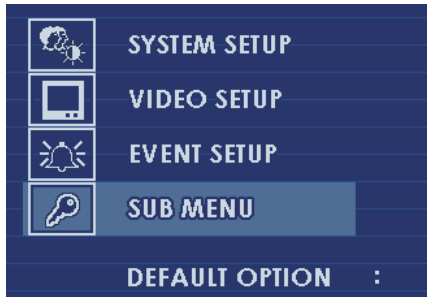

* Refer to the manual for more details.

Recording

Make sure SD card is properly inserted into the slot.

Press 'REC' button on the board or on the remote control in order to record.

* Refer to the manual for more details.

Playback

Play recorded files using the remote control

* Refer to the next page on how to use the remote control.


* Refer to the manual for more details.

Attention

* Do not take out the SD card or turn off AKR-40T while it is in record mode. It may damage SD card.

* When in record mode, turn off SD power by first pressing recording button for 3 seconds and then take the SD card out.

IR Receiver

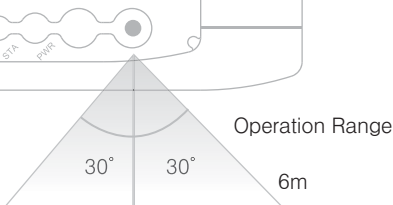

Remote Control



Front view



Rear view

Cautions

- * When using the remote control, point it at IR receiver on AKR-40T
- * IR receiver operation range should be within 60° for horizontal angle and the distance of Max. 6m.
- * When the remote control does not work, replace its battery.

* Button Cells Battery : CR2025 / 3V